


8. There are 2 double sided strips on top of P.B.S. Take the 2 paper strips off of the top of the lid this will expose the double side tape.
Slip top of P.B.S under your unit. (if the unit has a leg in the centre take it out. The top of the P.B.S once fitted will reinforce the bottom of your unit
9. Fit the plinth back on to your unit.
10. Lift up P.B.S top and move it forward place it level with front of plinth leg push lid up to fixing position (the lid will stay in that position).
11. There are 2 ways of screwing P.B.S top to your unit.
 - From inside of your unit use screws No. 4 x 6 Pilot hole your unit base bottom with 4 to 6 hols. Screw down throw your base into P.B.S top.
OR
 - Under your unit screw P.B.S top to the bottom of your unit.
12. Fit box back on to top side frame runners and push closed. See Picture D.

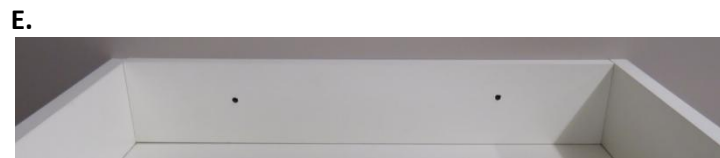

13. Stick 2 sided sticky pads to P.B.S box front x 2 or 3 take off paper to Expose the double side pads.
14. Push your cut plinths (your new front) on to the drawer box front, make share there is movement space on the 2 sides and bottom of front.
15. Push front and drawer box in, this will release box see in side of box there are 2 hols.
16. Use 2 x screws No4 screw into hols, this will fix your new front. See picture E



P.B.S box is ready to use
Push with foot to open / push with foot to close

Plinth Box System (P.B.S)

Fitting Instructions



Specifications of all P.B.S boxes

P.B.S Order Code	To Fit Width of Your Unit	Outer Width of P.B.S	Outer Depth of P.B.S 400mm deep	Outer Depth of P.B.S 450mm deep	Outer Height Of P.B.S	Internal Usable Height of P.B.S	Internal Width of P.B.S	Internal Depth of P.B.S 400mm deep	Internal Depth of P.B.S 450mm deep
PBS30	500mm	300mm	403mm	453mm	130mm	85mm	236mm	364mm	414mm
PBS40	600mm	400mm	403mm	453mm	130mm	85mm	336mm	364mm	414mm
PBS50	700mm	500mm	403mm	453mm	130mm	85mm	436mm	364mm	414mm
PBS60	800mm	600mm	403mm	453mm	130mm	85mm	536mm	364mm	414mm
PBS70	900mm	700mm	403mm	453mm	130mm	85mm	636mm	364mm	414mm
PBS80	1000mm	800mm	403mm	453mm	130mm	85mm	736mm	364mm	414mm


All Fitting Instructions for the P.B.S are set down as a suggestion only.
You can use any method to fit the P.B.S

Contents

1x Plinth Box



3x 2 double sided sticky pads

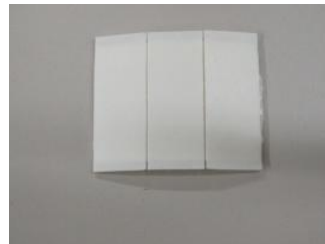

8 x Chipboard screw, Flat



1. Take P.B.S box and push the top back, this will expose box and runners see picture A.

A.



2. On the side of the runners there is a clip see picture B

B.



3. Push left side up and right side down at the same time this will release the runners from frame runners.

4. Slide out drawer box see Picture C. This will make it easier to install.

C.



5. If you have a plinth on your unit take off. Mark your plinth to the width of the P.B.S + 20mm e.g. P.B.S = 500mm plinth = 520mm wide.

6. (Make sure the plinth will fit back and your new cut plinth will sit in right place) this will enable you to fit more easily.

7. Cut your plinth. You may need to trim the top of the plinth so you have 2mm to 3mm gap at top and bottom. The plinth is now ready to fit.